



VF50 AIR FILTRATION UNIT INSTALLATION MANUAL



Table of Contents


| | | |
|-----|------------------------|---|
| 1.0 | Safety Advice..... | 3 |
| 2.0 | Overview..... | 3 |
| 3.0 | Installation..... | 4 |
| 4.0 | Dimensions..... | 4 |
| 5.0 | Internal Details | 4 |

1.0 Safety Advice

- Keep out of reach of children
- Refer to Safety Data Sheet
- Ensure adequate ventilation when removing filter from pack and installing.
- Do not puncture the container or otherwise interfere with the product as this will reduce the effectiveness and/or produce harmful vapours.
- First Aid Information: Poison Information Centre in each State capital city can provide additional assistance for:
 - Scheduled Poisons: Phone (Australia 13 1126)
 - Ingestion: Rinse mouth with water. Do NOT induce vomiting. Seek medical assistance.
 - Eyes & Skin: Be careful to avoid contact with contents, or fumes from the filter as they may cause irritation to eyes, skin or breathing passages. If contact occurs wash affected area with plenty of water.
 - Inhalation: Remove victim from exposure. Remove contaminated clothing and loosen remaining clothing. Allow patient to assume most comfortable position and keep warm. Keep at rest until fully recovered.
 - Seek medical advice if symptoms persist.

2.0 Overview

The air filtration system is designed for domestic house application, to treat wastewater odour emissions entering the inlet compartment at the base of the unit. The foul air is treated by McBerns Proprietary Combined Media, which is then emitted to atmosphere through the top compartment.

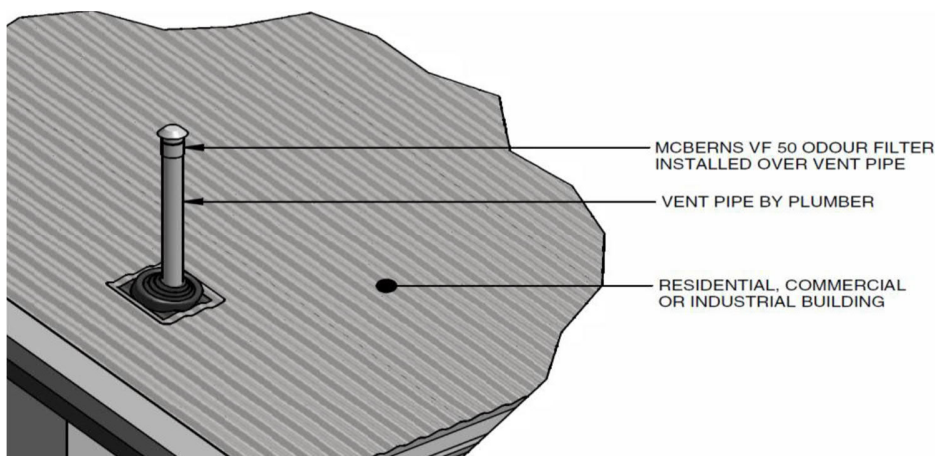


3.0 Installation

Note: Failure to comply with installation procedure will result in a void of warranty.

1. Ensure on delivery of filter all components are provided
2. Remove the VF50 from packaging
3. Remove existing vent cap and slide filter over vent pipe
4. We recommend the filter body be secured to the vent pipe by s/s screws or PVC glue
5. Install VF50 securely to the vent pole/ pipe, ensure all joints are sealed to eliminate any gases escaping.

4.0 Dimensions

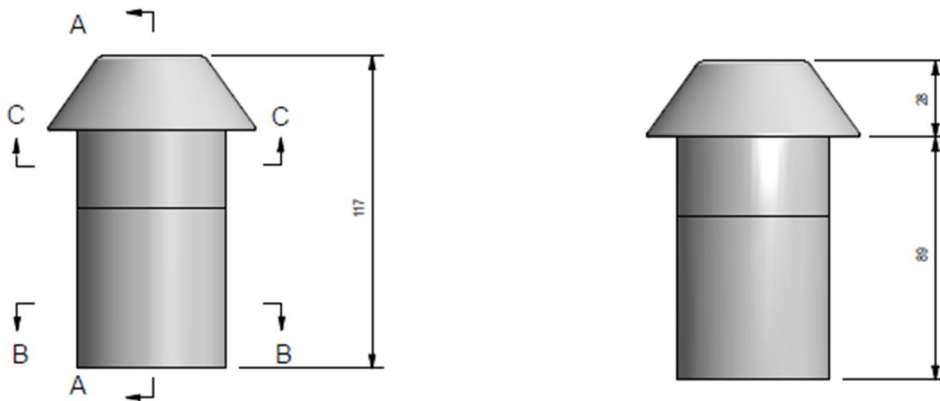

5.0 Internal Details

